

NUANCE ACCESSORIES Corner Shelf Installation

BEFORE YOU BEGIN

To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

- Local building codes vary by location. Observe all local plumbing and building codes.
- Unpack the Nuance panels and inspect them carefully for damage.
- Verify that the walls are the correct size for your installation.
- Refer to Nuance Technical Data sheet for specific dimensions for each model.

NOTE: Take extra care in handling the front surfaces of the panels. Use only non-abrasive cloths to avoid scratching.

PREPARATION

Determine corner and location of Corner Shelf.

CORNER SHELF INSTALLATION

Corner needs to be close to 90°, if not modifications will be required for the corner shelf to fit and could require modifications to the subwall structural framing.




Using a level, mark location where corner shelf is to be installed on the Nuance panels. (Recommend the Corner Shelf would be installed 43" from the shower floor).



Dry fit corner shelf to ensure good fit to wall panels, so that you do not have large gaps between Corner Shelf and panels.



Avoid large gaps between the Nuance surface and corner shelf by sanding, or cutting to ensure good fit to wall panels. Apply wooden support blocks (4) with hot melt to under location where corner shelf is to be mounted.

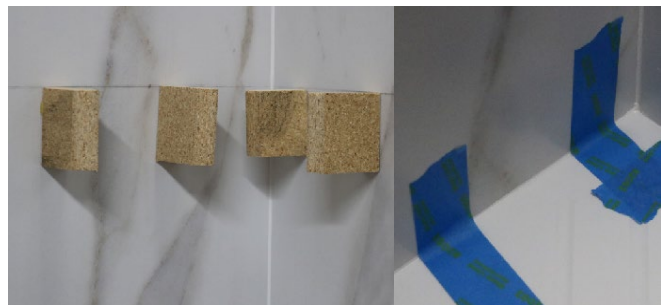

Place a piece of blue painters tape on top of support block, so that sealant does not prevent removal of support blocks after cured.

NOTE: Do not apply excessive hot melt to blocks or it will be difficult to remove blocks after sealant has cured.

Clean corner shelf and Nuance panels with denatured alcohol and clean white rag.


Apply Complete Color Matched Sealant to the entire backside edges of the corner shelf.

Press the corner shelf into place, ensuring that you have sealant squeeze above and below the backside edges of the corner shelf.

Smooth sealant between corner shelf and wall panels and clean up excess sealant with denatured alcohol.



Secure the corner shelf in place with tape. Allow 24 hours for the sealant to dry before use and remove support blocks by gently tapping them loose from Nuance panel.

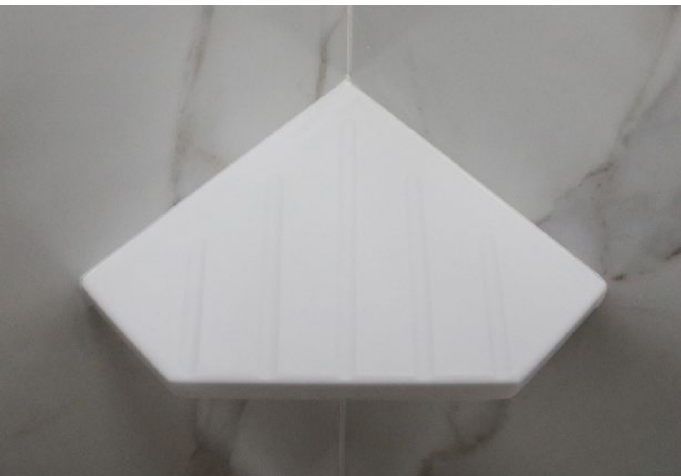

TOOLS/MATERIALS NEEDED

Level, Tape Measure, Heavy Duty Caulking Gun, Square, Denatured Alcohol, Clean White Rags, Wilsonart Complete Color Matched Sealant, (Sanding Device or Saw; if needed for proper fit to wall panels), Safety Glasses, Protective Gloves, Hearing Protection, Dust Mask, Hot Melt Glue Gun and Glue.

